


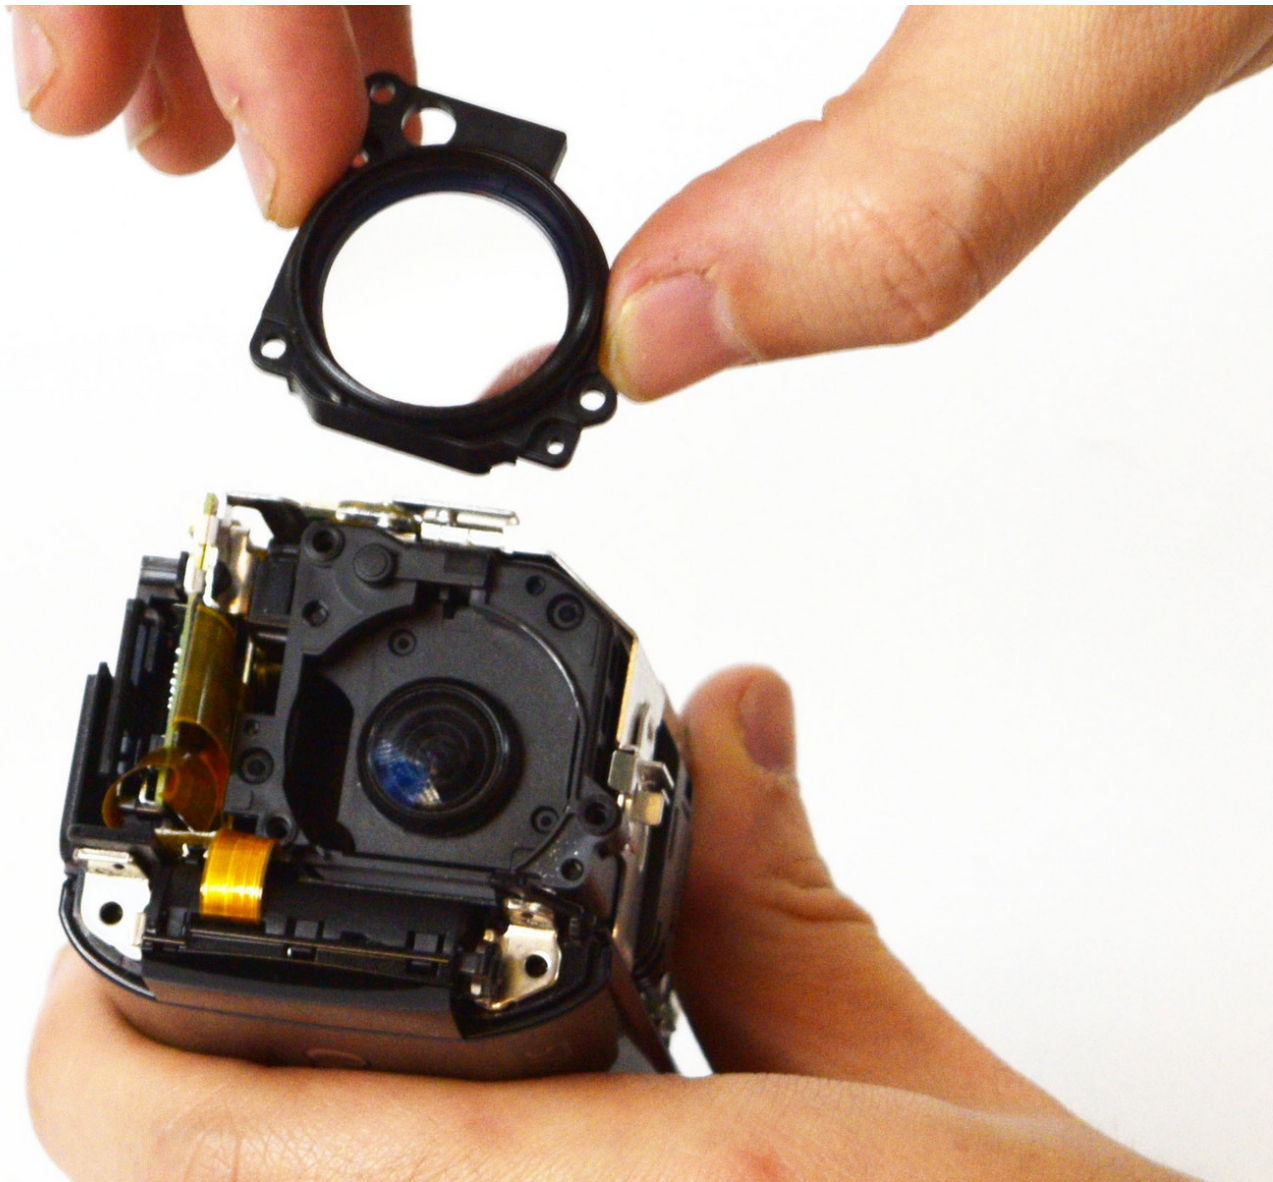

Canon Vixia HF R70 Lens Replacement

A detailed guide to removing and replacing the lens for your Canon Vixia HF R70.

Written By: Kristin Pitts



INTRODUCTION


Use this guide to remove and replace the lens to your Canon Vixia HF R70.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

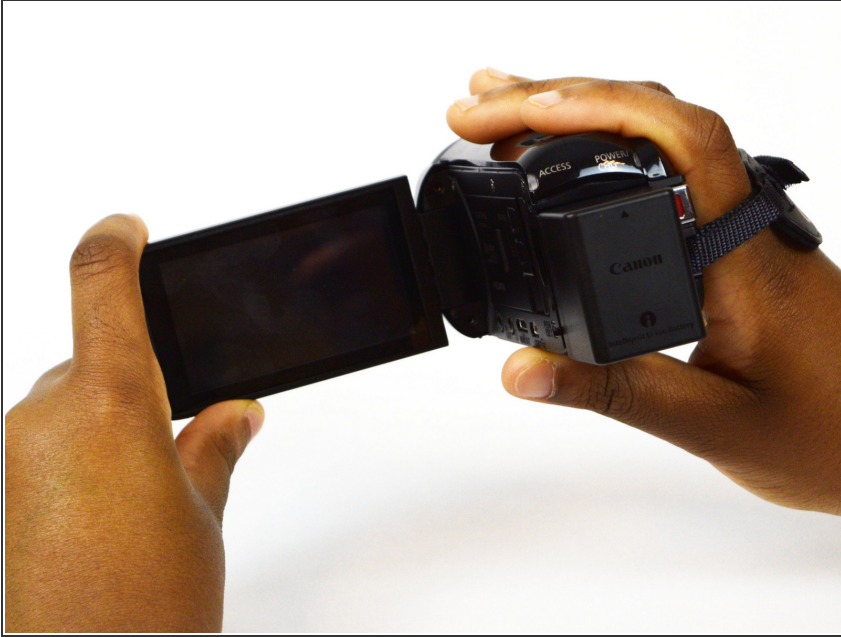


- Power off and unplug the device.
- Position the camera so that the battery is facing you.

Step 2




- Locate the latch on the bottom edge of the camera.
- Hold the battery into place and gently push down on the latch towards the lens.

Step 3

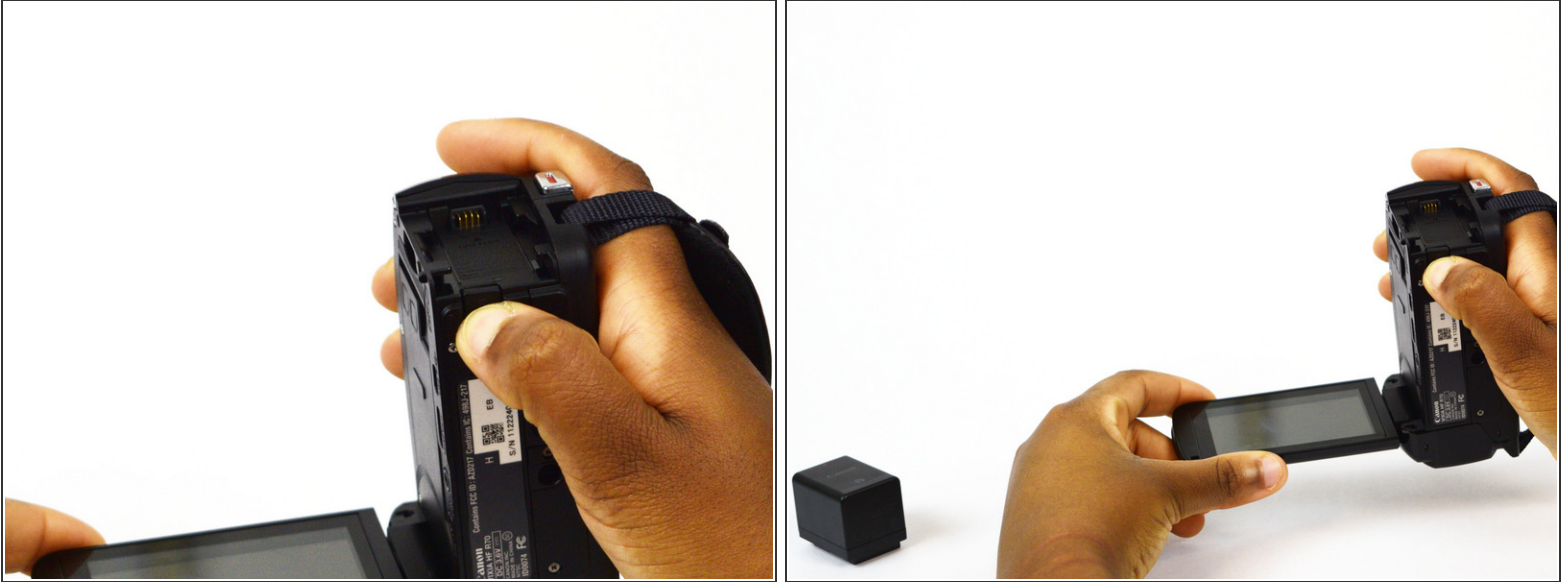

- While holding down the latch, remove the battery by pulling it out of the device.

Step 4 — Wrist Strap

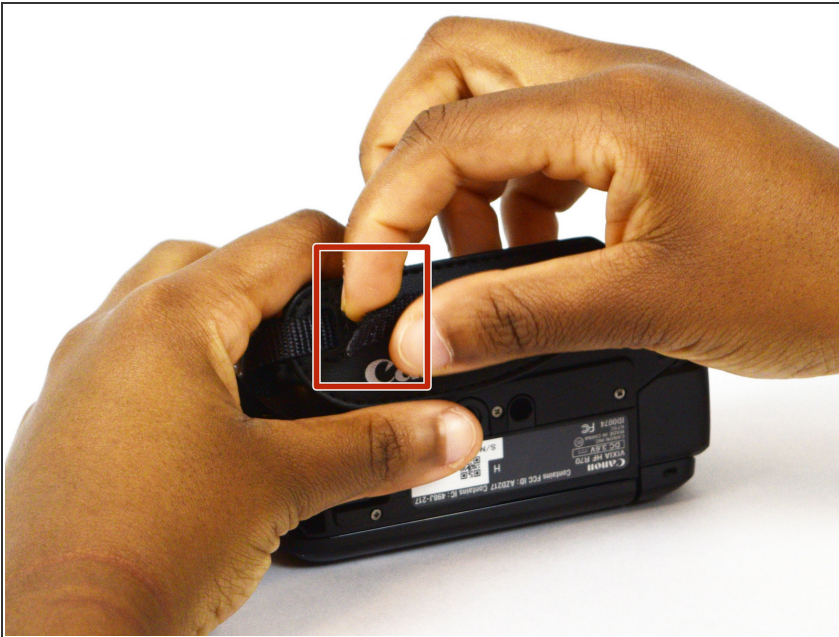

- Position the camcorder so that the wrist strap is facing you.
- Locate the loose end of the strap.

Step 5



- Gently pull on the loose end to separate the Velcro.

Step 6



- Locate the "slot" on bottom right corner of the camcorder where the strap loops through.
- Pull the strap through the loop.

Step 7




- Pull the strap through the leather cushion.

Step 8




- Pull the strap through the slot on the left side of the camcorder.

Step 9 — Side Panel

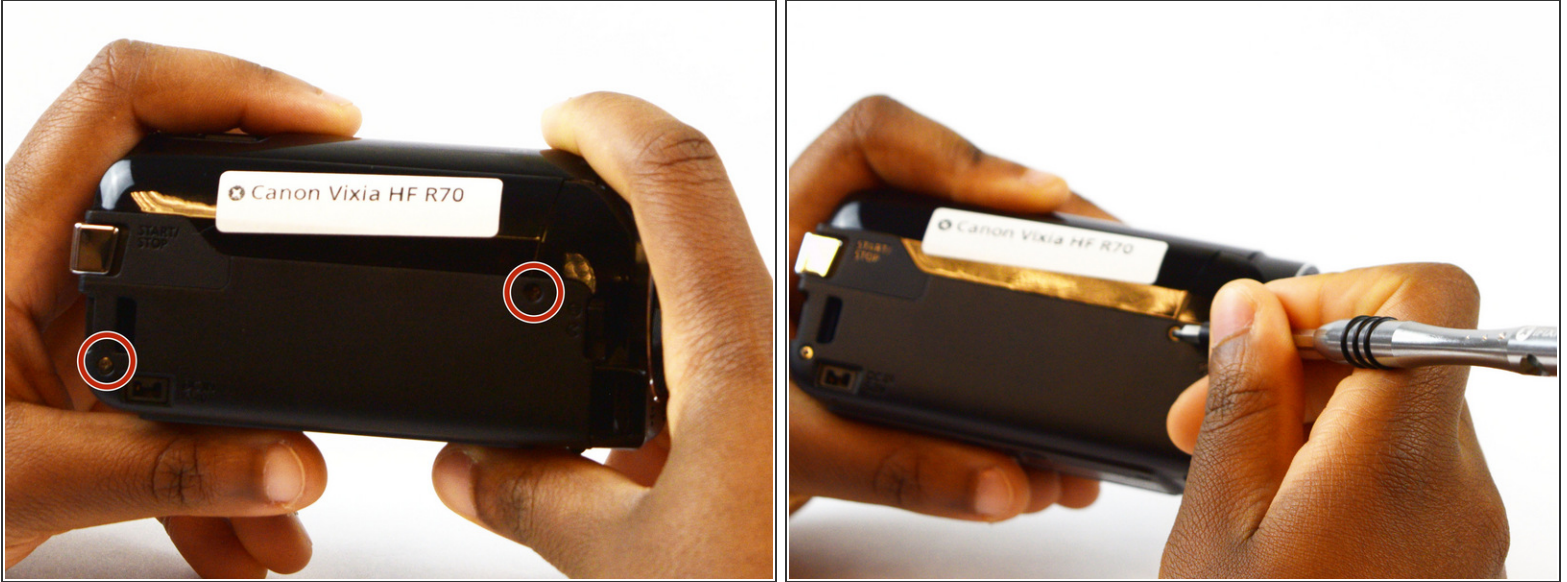



- Position the camcorder so that the side panel is facing you.
- Locate the two 6mm Phillips #00 screws on the side panel.
- Remove the the screws using a screwdriver with a Phillips #00 head.

Step 10

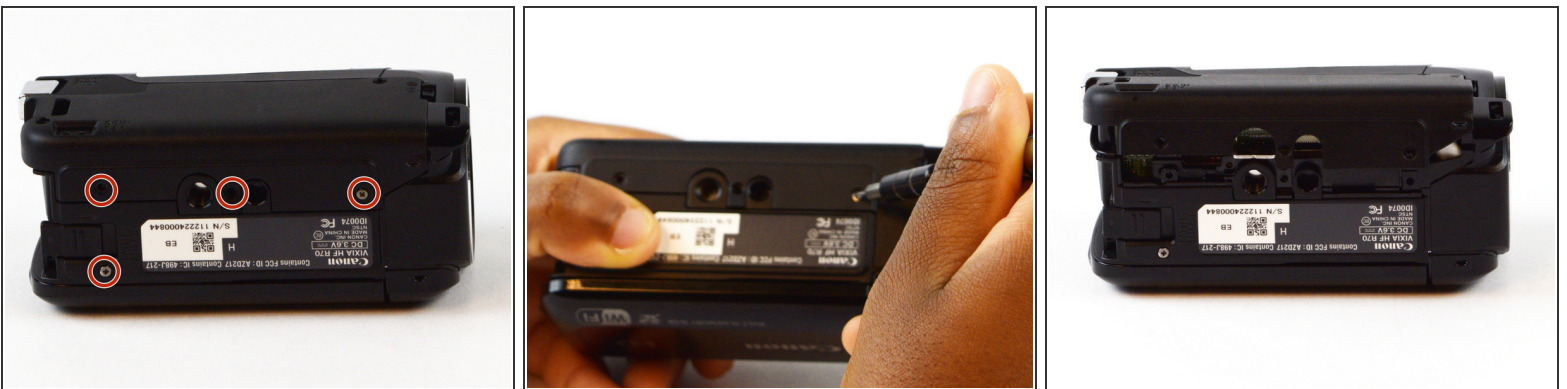


- Turn the camcorder so that the bottom is facing you.
- Using your screwdriver, locate and remove the four 6mm Phillips #00 screws connecting the side panel to the bottom of the camcorder.

Step 11

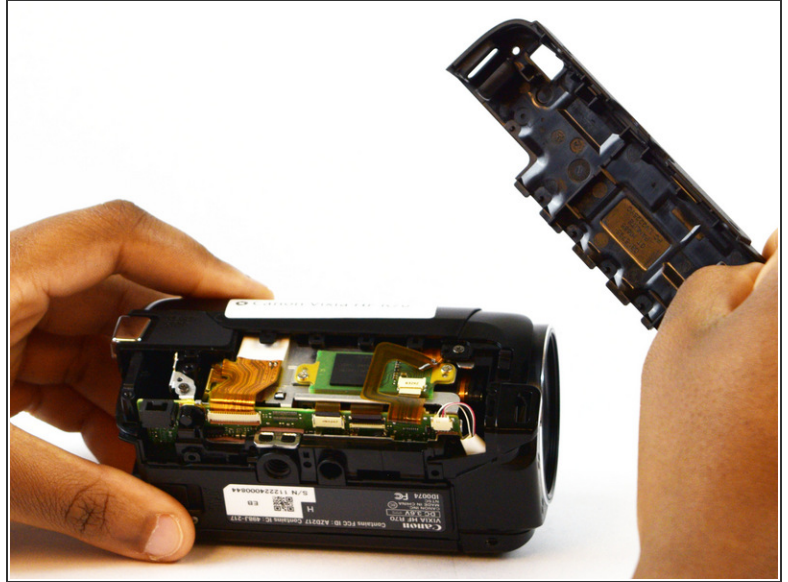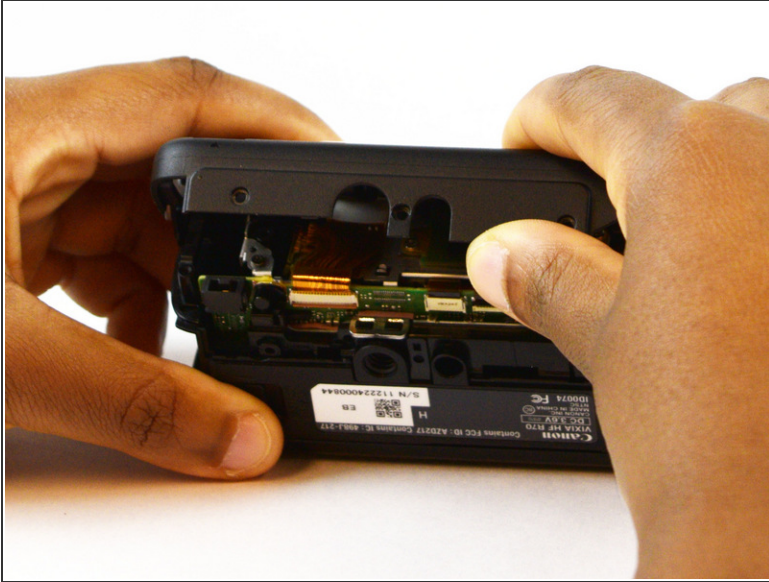


- Gently remove the side panel by pushing it up from the bottom.

Step 12 — Top Panel

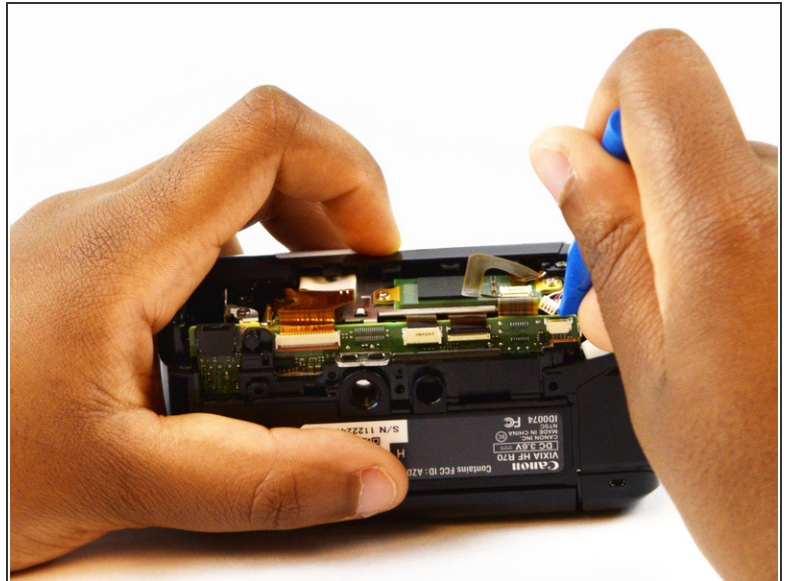


- Disconnect the wires by inserting the plastic opening tool into the small slit.
- Begin to push upward with the plastic opening tool, disconnecting the two compartments.

Step 13

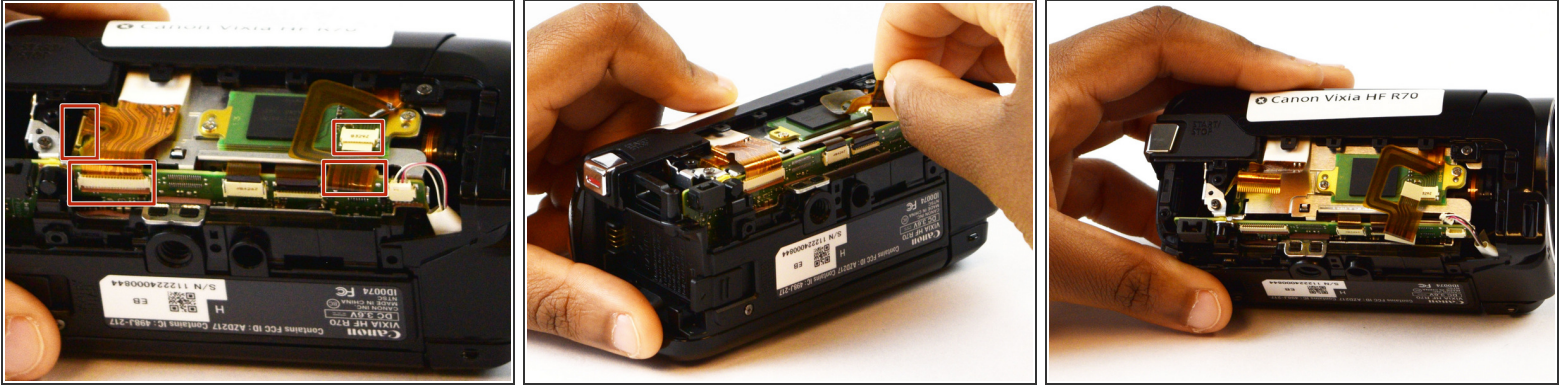

- Disconnect the four ZIF connectors by grasping the connector firmly and pulling gently.

Step 14

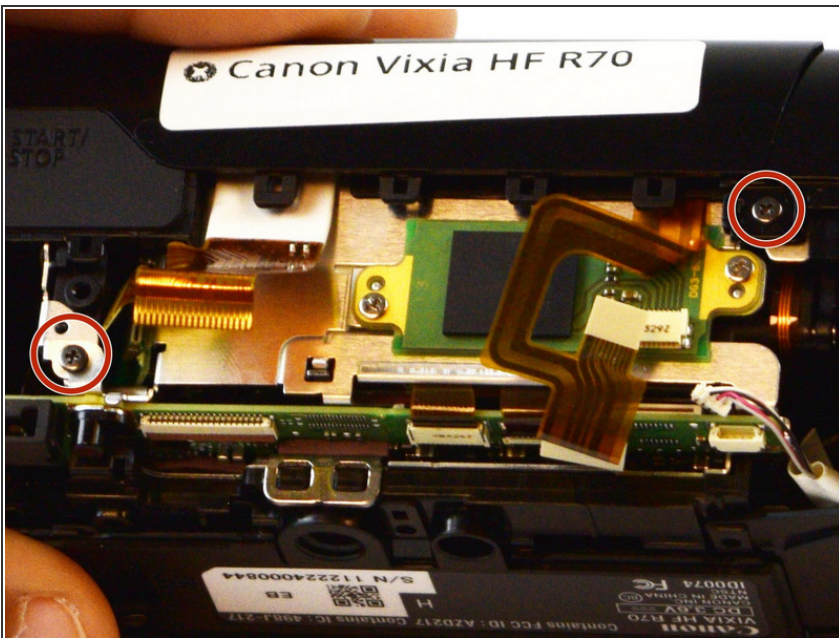


- Locate and remove the two 3mm Phillips #00 screws on the side of the camera where the side panel was removed.

Step 15




- Turn the camera over to the side with the LCD screen, and open the screen.
- Locate and remove the three 5mm Phillips #00 screws holding the top panel in place.

Step 16

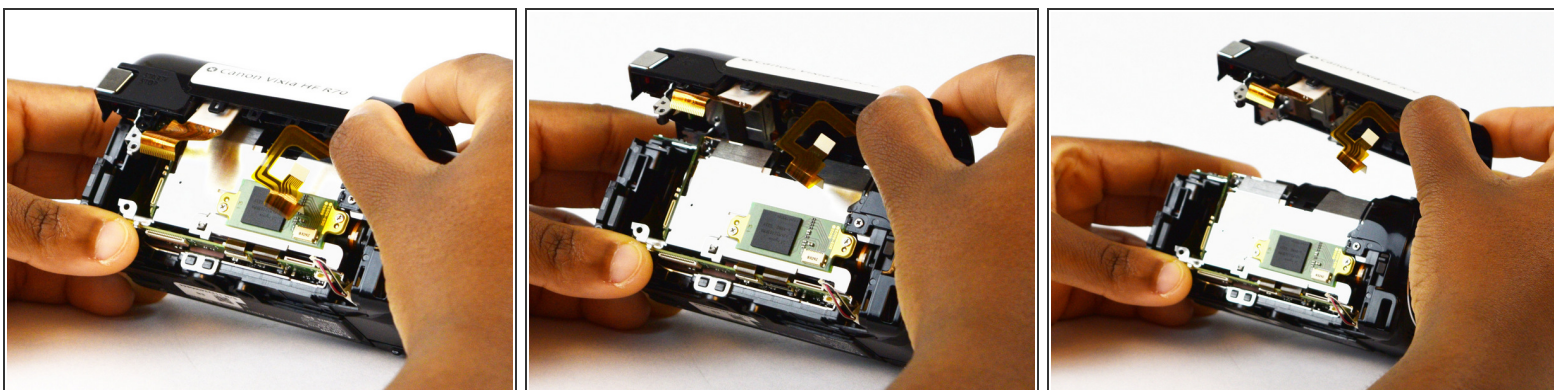


- Pull the panel up and away until it is removed completely.

Step 17 — Shutter

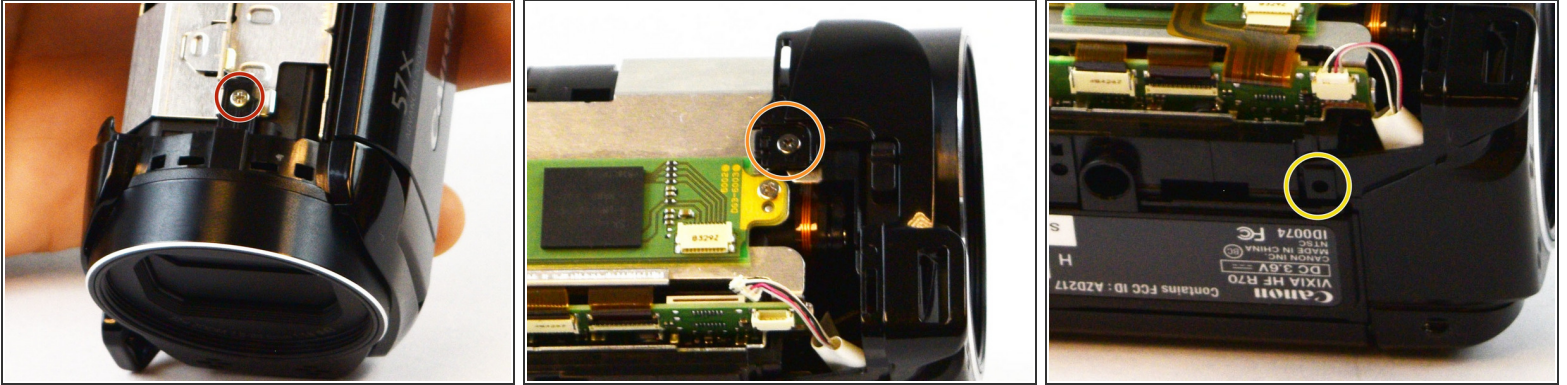



- There are three 5mm Phillips #00 screws that need to be removed - one on the top, one on the side, and one on the bottom.
- Locate and remove the screw on the top side of the camera.
- Locate and remove the screw on the side of the camera where you previously removed the side panel.
- Locate and remove the screw on the bottom of the camera.

Step 18

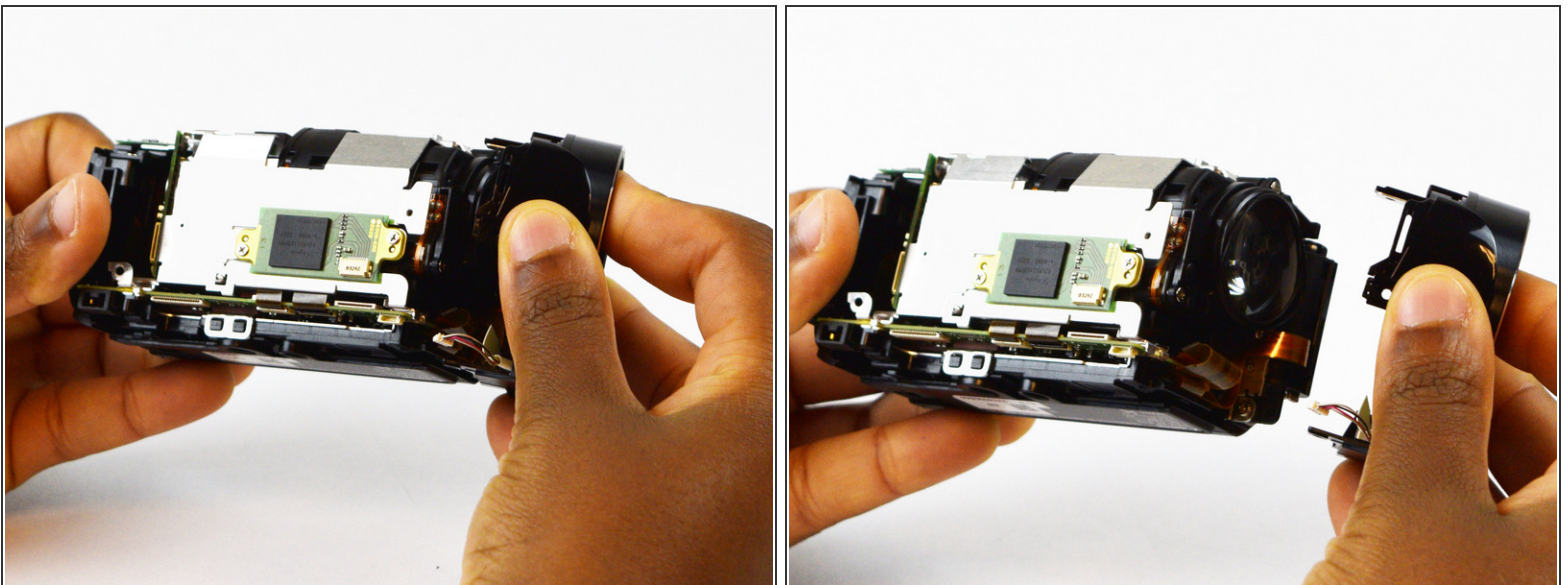



- Pull the entire shutter away from the body of the camera to remove it.

Step 19 — Lens

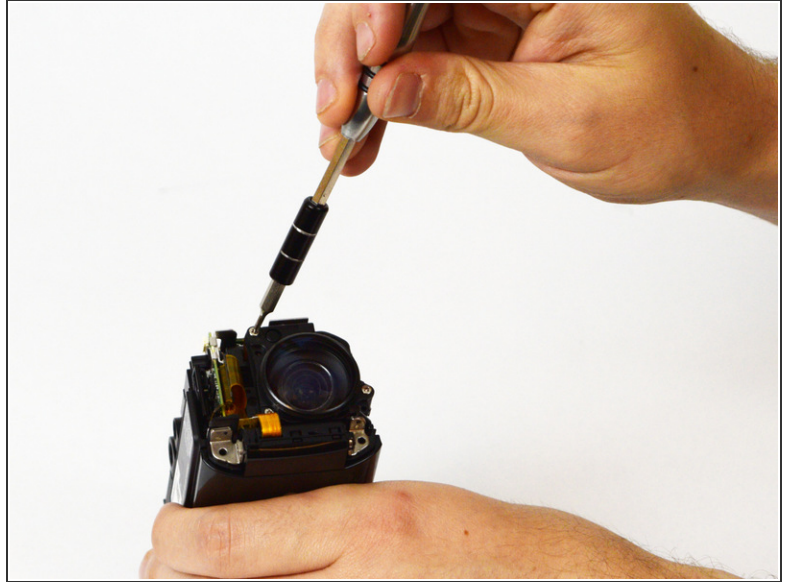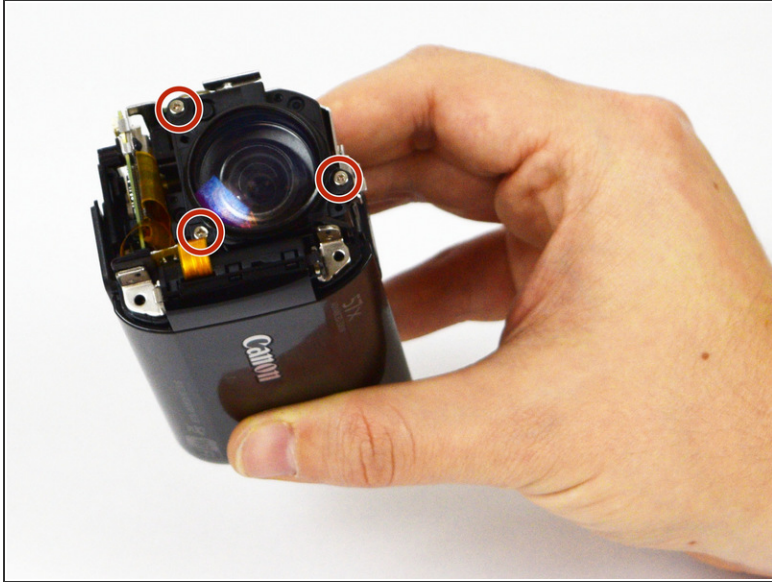

- With the front of the camera facing you, locate and remove the three 5mm Phillips #00 screws that hold the lens in place.

Step 20

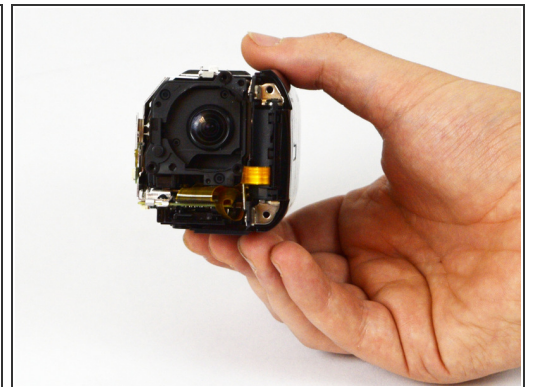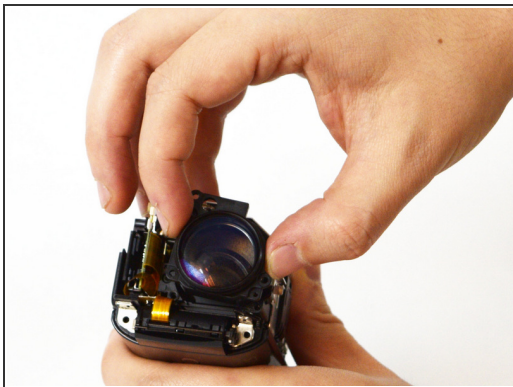

- Grasp the plastic sides of the lens, and pull it away from the camera body to finish removing the lens.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 02:53:46 PM.